 


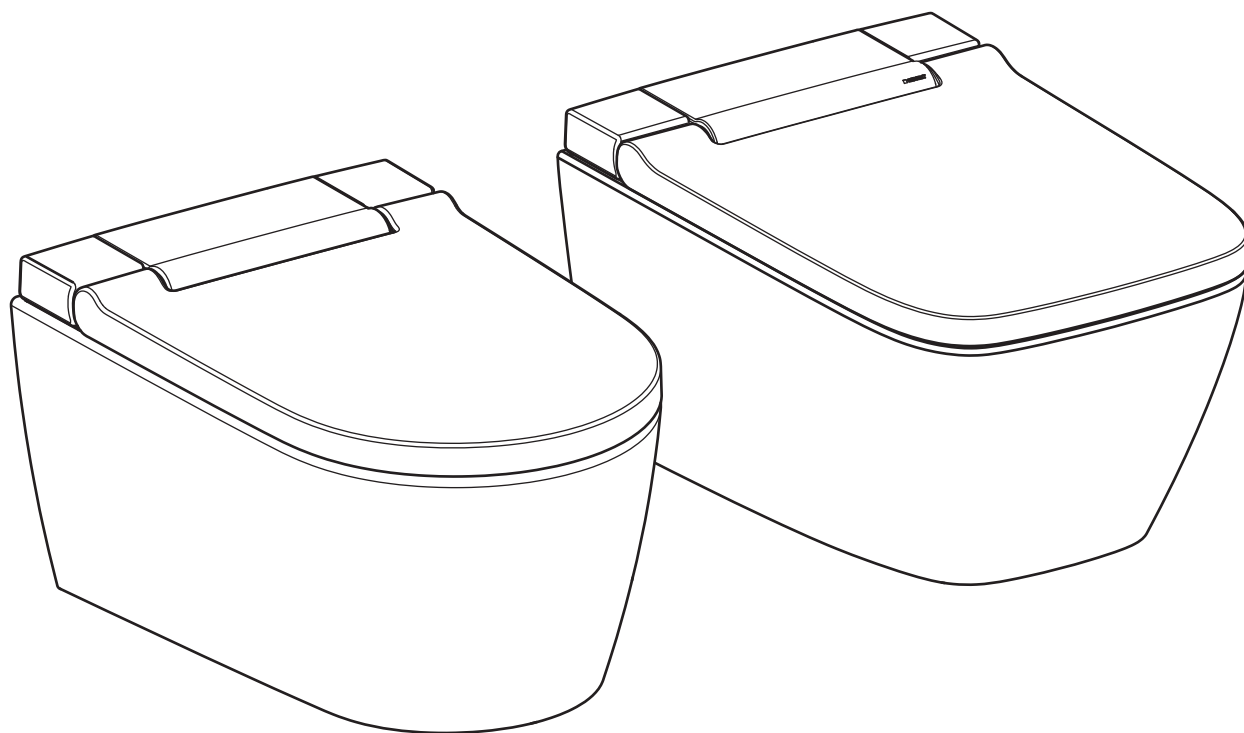

QUICK GUIDE



For your safety

What should you avoid?

The product must be used as intended. Do not:

- leave the WC seat ring during the shower procedure
- place loads or objects on the WC lid
- immerse the remote control in liquid
- operate without plug for Geberit AquaClean descaling agent

Register your device

Warranty registration

Extend the warranty period of your Geberit AquaClean for free. Register for this within 90 days from the installation date.



In the third year of the warranty period, Geberit shall supply spare parts free of charge in the event of any material or manufacturing faults, provided the product has been installed and put into operation by an installation company.

By web link:

<https://www.geberit-global.com/landingpages/gac-onboarding/>

By smartphone or tablet:



Android:



iOS:

 


Via the Geberit Home App:


If your country is not listed on the onboarding web page, please consult the list of contact information and websites. → See "Contact".

Getting to know your device

The device at a glance

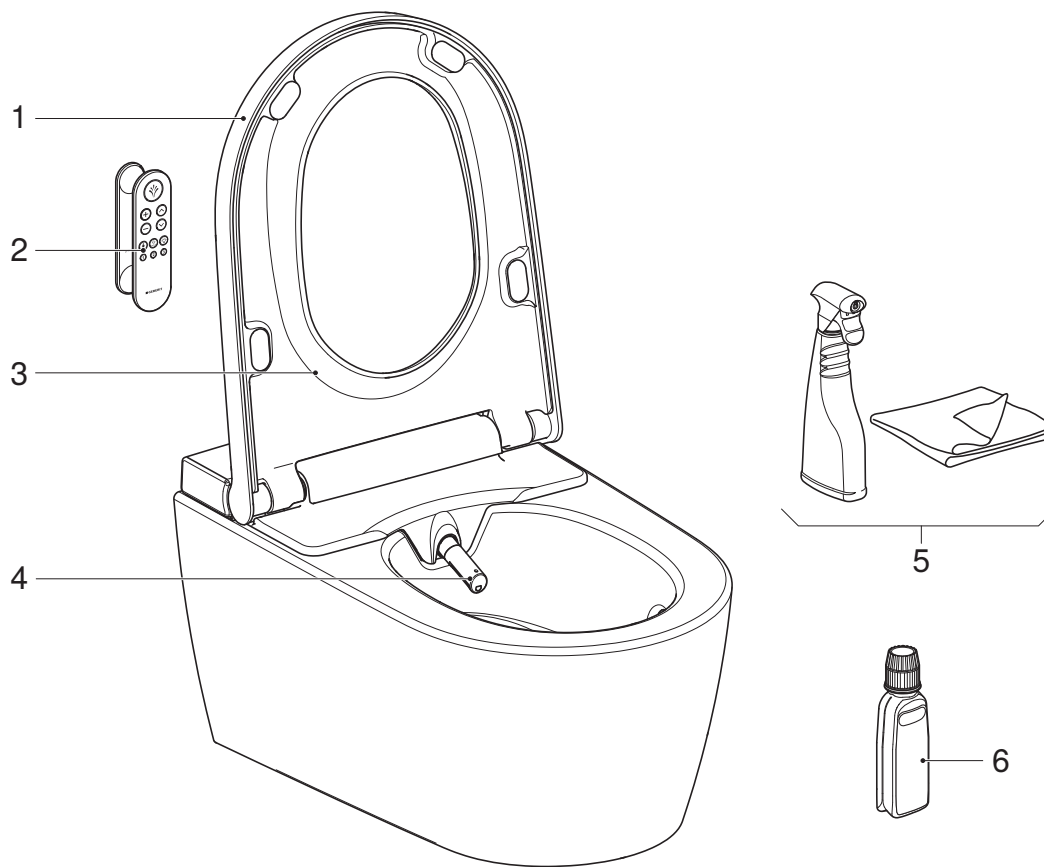

 - 1 WC lid
- 2 Remote control with magnetic wall-mounted holder
- 3 WC seat ring
- 4 Spray arm with spray nozzle and Lady shower nozzle
- 5 Geberit AquaClean cleaning set (art. no. 242.547.00.1)
- 6 Geberit AquaClean descaling agent (art. no. 147.040.00.1)

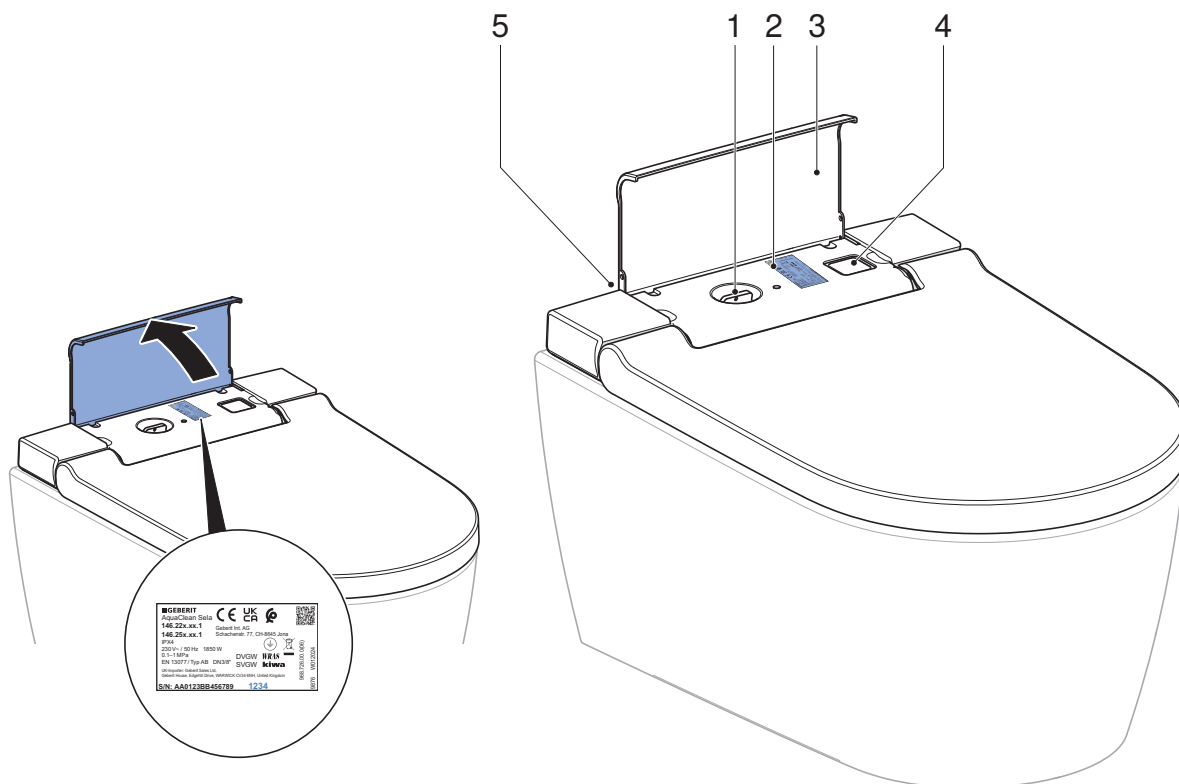

- 1 Filling opening with plug for Geberit AquaClean descaling agent
- 2 Specification plate with serial number
- 3 Design cover
- 4 Power switch
- 5 Orientation light

Some components and the consumables listed below can be ordered directly via the Geberit Home app or via the Geberit web shop.

Consumables	Information
Geberit AquaClean cleaning set	Art. no. 242.547.00.1
Geberit AquaClean descaling agent	Art. no. 147.040.00.1
Geberit AquaClean descaling agent set (4 pcs)	Art. no. 147.047.00.1
Geberit AquaClean descaling agent set (10 pcs)	Art. no. 147.048.00.1
AquaClean Sela spray nozzle	Art. no. 243.527.11.1
AquaClean Sela remote control	Art. no. 245.820.01.1

Operating concept

About the operating concept

 
The shower toilet can be operated via remote control or the Geberit Home App.



The remote control function of the Geberit AquaClean shower toilet is deactivated while the shower toilet is connected to the Geberit Home App.

Front side of the remote control

All functions for daily use can be operated from the front side of the remote control.

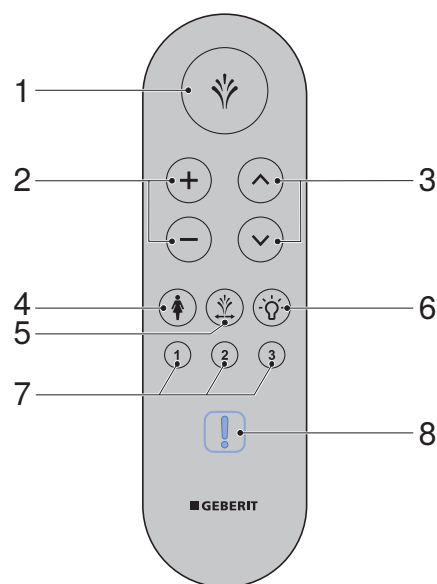

- 1 <Shower> button:
 - Start and stop the spray functionality
 - Stop the lady shower
- 2 <+>/<-> buttons: Increase or decrease the spray intensity
- 3 <Up>/<down> arrow buttons: Set shower arm position (shower arm forwards / backwards)
- 4 <Lady shower> button: Start and stop the Lady shower
- 5 <Oscillating motion> button: Start and stop the oscillating motion during the anal shower
- 6 <Orientation light> button: Switch the orientation light on and off
- 7 <User profile> buttons: Select the user profiles 1–3
- 8 Status LED (only visible if necessary)

Rear side of the remote control

You can access different settings and additional functions via the rear side of the remote control.



 
To extend the battery life, the display switches to standby mode after a certain time.



If a remote control from year 2024 is used with an older firmware version on the device, not all functions are available:

- Display only shows 2 lines
- No LED display on the front of the remote control
- No function via the three preset buttons
- No function via the OK button

To be able to use all functions, carry out a firmware update with the Geberit Home app (FW version $\geq$ v 8.0).

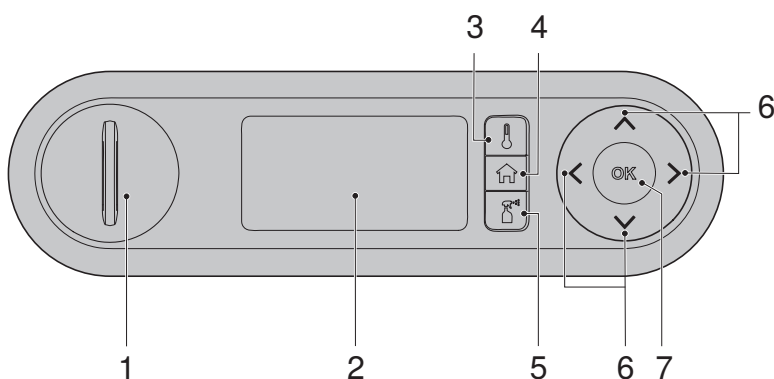

- | | |
|---|--|
| 1 | Battery compartment |
| 2 | Ink display |
| 3 | <Temperature> preset button |
| 4 | <Home> preset button |
| 5 | <Care and maintenance> preset button |
| 6 | <Up>/<down>, <left>/<right> arrow keys |
| 7 | <OK/Save> button |

Downloading the Geberit Home app

Download the Geberit Home app free of charge from the respective App-Store:

1

Open the App-Store on your smartphone.

2

Enter 'Geberit Home' in the search field.

✓ The Geberit Home app is displayed.



3

Download the app.

✓ The app is downloaded and displayed on your smartphone.

Alternatively, you can scan the respective QR code to download the Geberit Home app:

Android:



iOS:



How to use the device

Using the anal shower



See user manual.



 
<https://doc.geberit.com/972.047.00.0>

Prerequisite

- You are sitting down on the WC seat ring.



Briefly press the <Shower> button on the remote control.

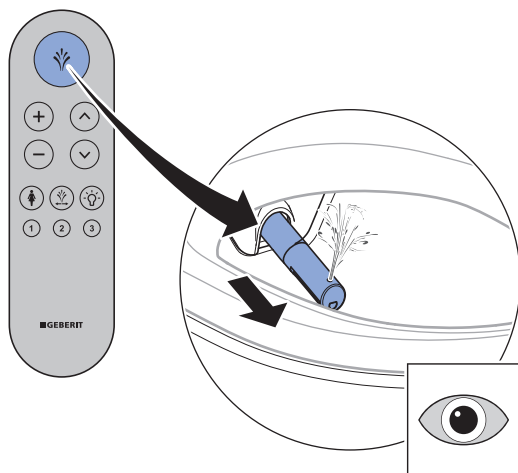

Result

- ✓ The shower procedure starts with the oscillating motion.



You can stop the shower procedure early by pressing the <Shower> button once again.

 
 
Setting the spray intensity

Prerequisite

- The shower procedure is running.



Press the <+> button to increase the spray intensity. Press the <-> button to decrease the spray intensity.

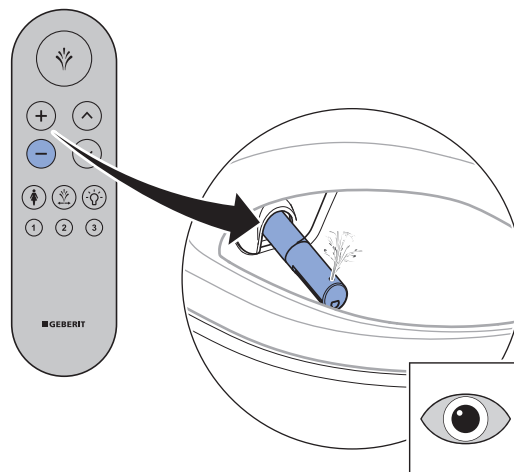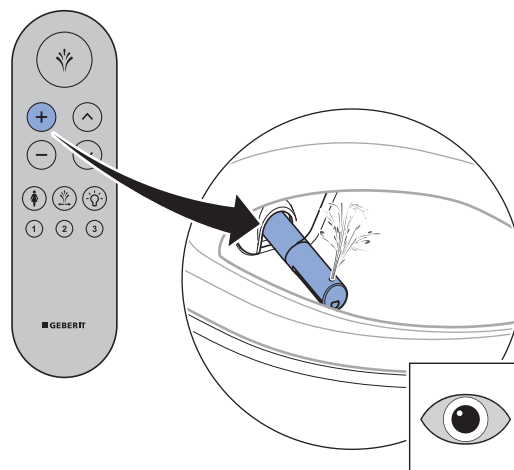

Result

- ✓ The shower spray becomes stronger/weaker.



You can set the spray intensity in 5 stages.

 
Setting the spray arm position

- i** Female users should set the spray arm position of the spray functionality to their ergonomic conditions so that it does not compromise the natural protection of the vaginal area.

Prerequisite

- The shower procedure is running.

- ▶ Press the arrow keys on the remote control to position the spray arm.

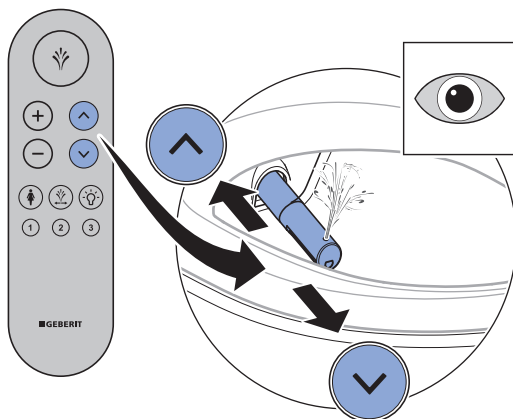

Result

 
- ✓ The spray arm is optimally positioned.

- i** You can set the spray arm position in 5 stages.

Switching the oscillating motion of the anal shower on and off

- i** The oscillating motion of the spray arm increases the cleaning effect.

- ▶ The oscillating motion can be switched on and off during the shower procedure by pressing the <oscillating motion> button or by pressing the <forwards> and <backwards> arrow keys at the same time.

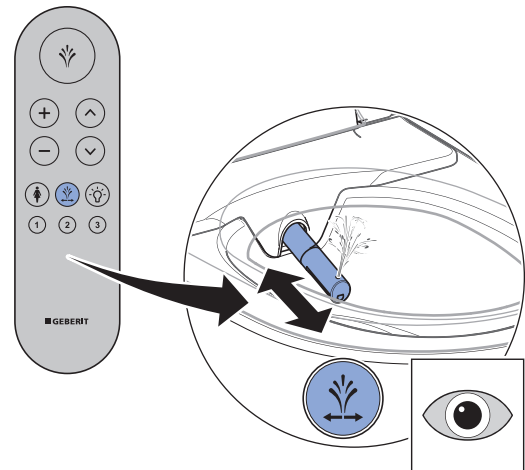

Using the Lady shower



 
The woman's intimate area is a very sensitive zone and requires special and prudent care. The Lady shower must be set to your ergonomic conditions to achieve an optimal cleaning result. The position of the spray nozzle and the spray intensity must be selected so that the shower spray cannot penetrate the vagina.

Prerequisite

- You are sitting down on the WC seat ring.



Press the <Lady shower> button on the remote control.

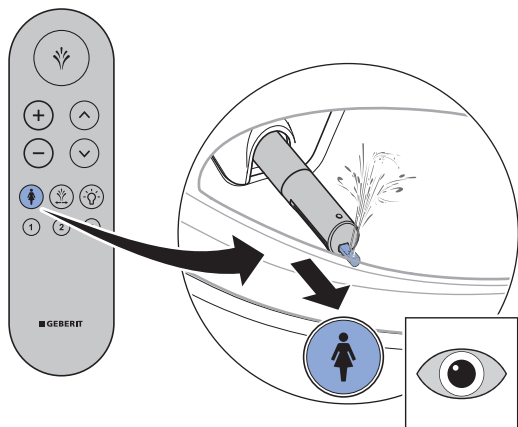

Result

- ✓ The shower procedure starts.



You can stop the shower procedure early by pressing the <Lady shower> button once again.

 
Switching the orientation light off and on

Prerequisite

- The device is switched on.



Press the <Orientation light> button on the remote control.

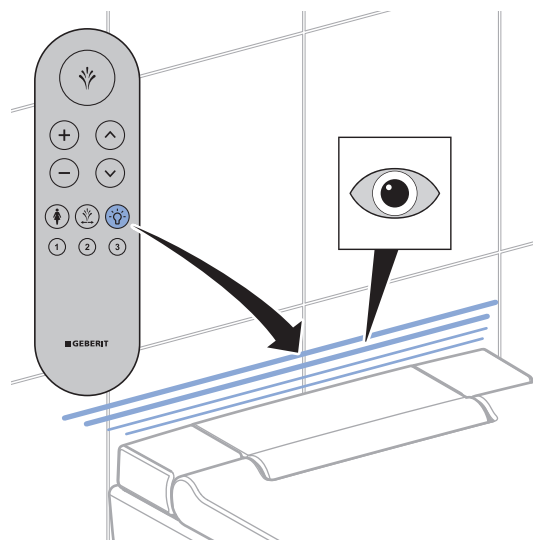

Result

- ✓ The orientation light goes out/lights up.

Saving user profiles

Three different user profiles can be stored via the <user profile> buttons on the remote control.



 
User profiles allow you to access your personal settings directly. Select your user profile as soon as you sit down.

1

Enter your personal settings.

2

Press one of the 3 <user profile> buttons for more than 2 seconds.

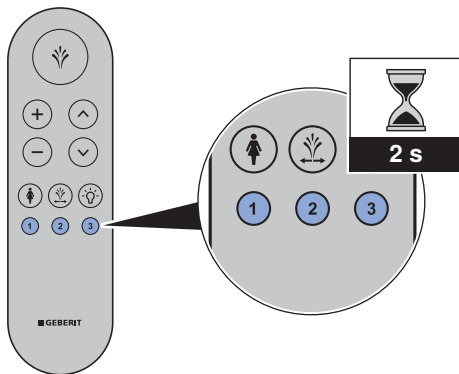

- ✓ The LED on the remote control briefly lights up green.

Result

- ✓ The current settings are saved to this button.

Calling up user profiles



 
User profiles allow you to access your personal settings directly. Select your user profile as soon as you sit down.

Prerequisite

- Personal user profiles are saved to the <User profile> buttons.



Press the <User profile> button on which your personal settings are stored.

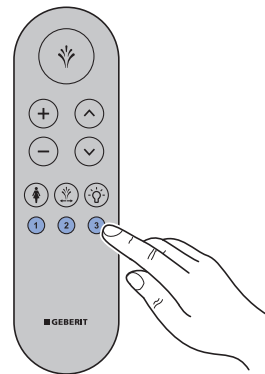

Result

- ✓ Your personal user profile is called up.
- ✓ The shower procedure can be started with your personalised settings using the <shower> button.

Saving a personal user profile in the Geberit Home App

Prerequisite

- The current version of the Geberit Home app is installed on your smartphone.
- The Geberit Home app is running.
- You are within the detection range of the shower toilet. User recognition does not have to be activated.

1 Enter your personal settings.

2 Save your settings in the Geberit Home app.

Result

- ✓ Your personal user profile is saved onto your smartphone.
- ✓ The settings apply to all connected shower toilets.

How to clean the device

Suitable cleaning agents and cleaning equipment

ATTENTION

Aggressive descaling agents

Unsuitable descaling agents may cause damage to the device.

- ▶ Only use Geberit AquaClean descaling agents to descale the device.
- ▶ Refer to the “Descaling the device” section.

ATTENTION

Aggressive and scouring cleaning agents

Cleaning using aggressive and scouring cleaning agents can cause surface damage.

- ▶ Use Geberit AquaClean cleaning agents.
- ▶ Pay attention to the cleaning and care instructions.

Using the Geberit AquaClean cleaning set is recommended, as this set includes a ready-made cleaning agent that is ideal for cleaning all Geberit AquaClean surfaces.

Recommended properties of suitable cleaning agents and cleaning equipment for best cleaning results:

Symbol	Properties of suitable cleaning agents
	Skin-friendly
	Cleaning agents are permitted to have a low acid content, e.g. diluted citric acid
	Low-foaming
	Liquid
	Water-dilutable

Symbol	Suitable cleaning equipment
	Soft, fine-pored sponges
	Lint-free, soft cloths which are free of dust
	Toilet brush

