

SOLA SHOWER RAIL, HOSE & HANDSET

Installation Instructions & Maintenance Guide

SF1261CP/SF1256CP

Please retain this document for future reference.


This product should be fitted in compliance with Water Regulations, by a qualified plumber.

Use only a clean damp cloth to maintain the surface finish, use of abrasive cleaning materials will invalidate your guarantee.



IMPORTANT: Please read all of the instructions before installation.

Twyford
Geberit Group

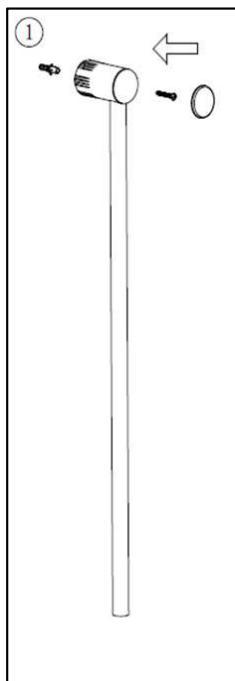


Select location for kit, ensuring no wiring or pipework in the wall can be damaged, also that when the slider bracket is positioned at the top of the rail, the hose is not over extended.

The location should also ensure that during use, the water flow is directed toward a suitable location, so as not to cause water damage.

Remove the caps from the front of the end brackets, using a sharp blade, taking care not to damage the product.

Place both end brackets on the rail and position as required and mark drill holes.

Drill holes in marked position and insert wall plugs.

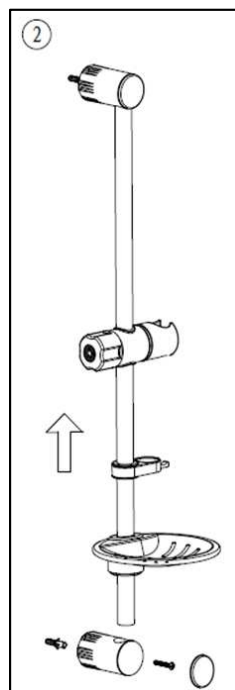


Place the slider bracket onto the rail, ensuring the wider opening of the handset holder is located upwards.

Fit the hose retainer and soap dish to the rail.

Fit both end brackets and locate assembled rail over the drill holes.

Place wall screw through top end bracket and loosely fit to the wall.

Place screw through bottom end bracket and then secure assembly to the wall.

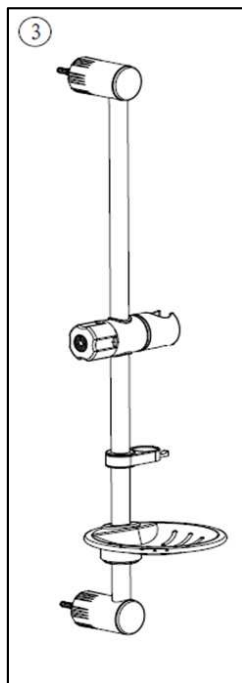


Locate hose retainer and soap dish as required.

To locate the slider bracket, ensure that slider handle is turned to release the bracket, before attempting to move along the rail, failure to this will damage the rail surface.

Ensure that the rail is fully secured to the wall before fitting handset.

Fit chrome end caps to both top and bottom brackets.

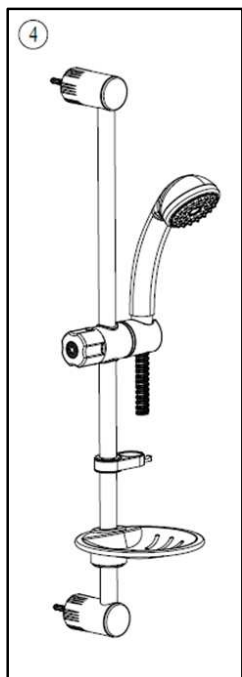

Fit hose seals to both ends of shower hose.

Thread the hose through the hole in the hose retainer.

Screw the cone end of the hose to the handset.

Screw the opposite end of the hose to the mixer.

Locate the hose cone into the slide bracket, ensuring that it is fully inserted.

If the cone is not fully inserted, the handset may fall out during use.

To adjust the angle of the handset, gently move the handset just above the slider.

If required the 8 litre per minute flow regulator should be fitted between the hose and handset instead of the rubber washer.

Your product has a high quality finish and should be treated with care to preserve the visible surfaces.

Never use abrasives or abrasive cleaning agents to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth. Do not use products containing chlorine bleach or hydrochloric acid as these can damage the product. Always rinse the product thoroughly after cleaning to remove cleaning products that can damage the product finish.

Your product comes with a 1 year guarantee, proof of purchase is required.

The guarantee does not cover faults or damage caused by incorrect installation and/or maintenance, ordinary wear and tear, water composition etc. including:
Supply pipes reversed, Incorrect pressure or temperature, *Incorrect use, Foreign bodies and/or scale due to the water composition, Incorrect cleaning.

We have a policy of continuous improvement and reserve the right to change specifications without notice

INST SF1261CP/SF1256CP – V1