 


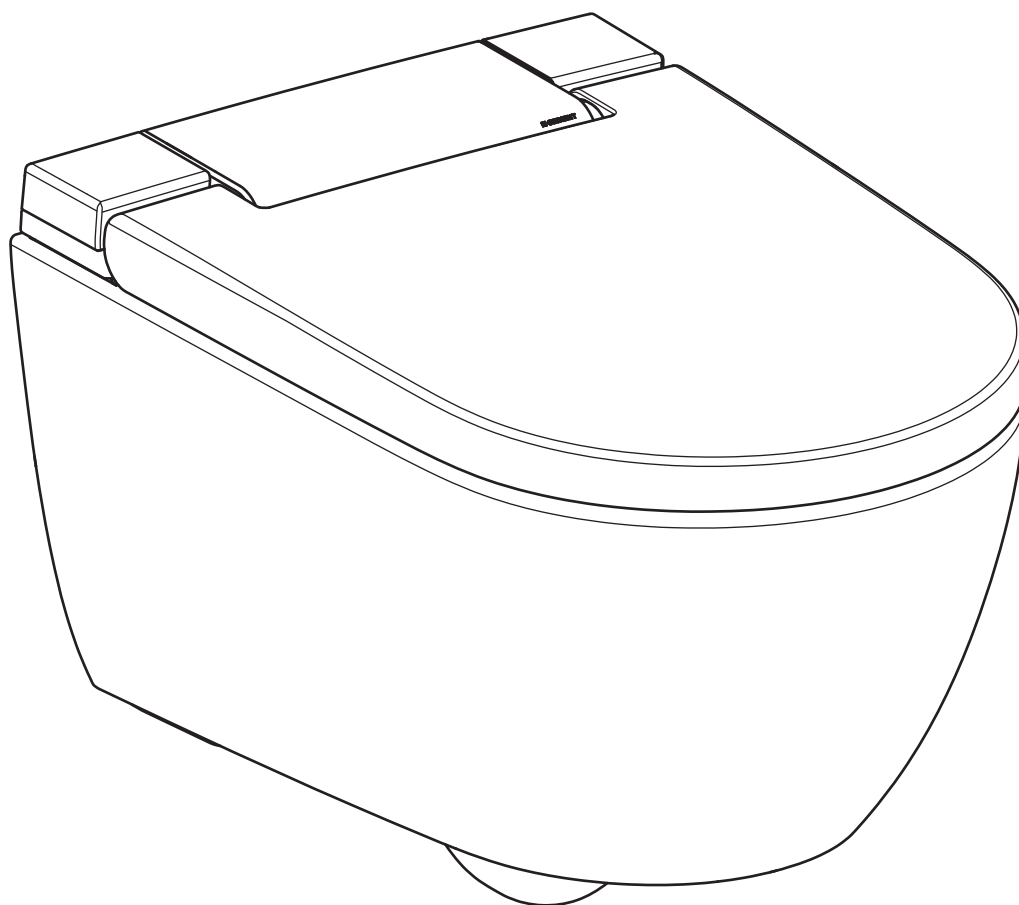

QUICK GUIDE



For your safety

What should you avoid?

The product must be used as intended. Do not:

- leave the WC seat ring during the shower procedure
- place loads or objects on the WC lid
- immerse the remote control in liquid
- operate without plug for Geberit AquaClean descaling agent

Register your device

Warranty registration

Extend the warranty period of your Geberit AquaClean for free. Register for this within 90 days from the installation date.



In the third year of the warranty period, Geberit shall supply spare parts free of charge in the event of any material or manufacturing faults, provided the product has been installed and put into operation by an installation company.

By web link:

<https://www.geberit-global.com/landingpages/gac-onboarding/>

By smartphone or tablet:



[Android:](#)



[iOS:](#)

 


Via the Geberit Home App:


If your country is not listed on the onboarding web page, please consult the list of contact information and websites. → See "Contact".

Getting to know your device

The device at a glance

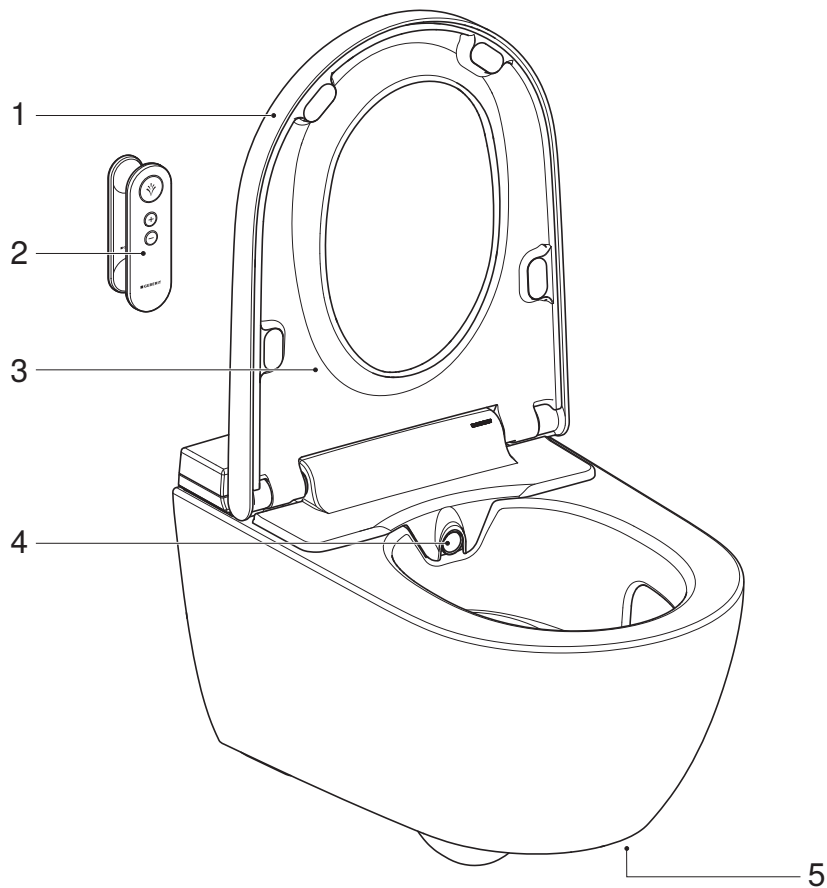

 - 1 WC lid
- 2 Remote control with wall-mounted holder
- 3 WC seat ring
- 4 Spray arm with spray nozzle
- 5 Bottom of the device: Power switch



Some components and the consumables listed below can be ordered directly via the Geberit Home app or via the Geberit web shop.

Consumables	Information
Geberit AquaClean cleaning set	Art. no. 242.547.00.1
Geberit AquaClean descaling agent	Art. no. 147.040.00.1
Geberit AquaClean descaling agent set (4 pcs)	Art. no. 147.047.00.1
Geberit AquaClean descaling agent set (10 pcs)	Art. no. 147.048.00.1
AquaClean Alba spray nozzle	Art. no. 243.927.11.1
AquaClean Alba remote control	Art. no. 245.368.01.1

Operating concept

About the operating concept

 
The shower toilet can be operated via remote control or the Geberit Home App.



The remote control function of the Geberit AquaClean shower toilet is deactivated while the shower toilet is connected to the Geberit Home App.


Front side of the remote control

All functions for daily use can be operated from the front side of the remote control.

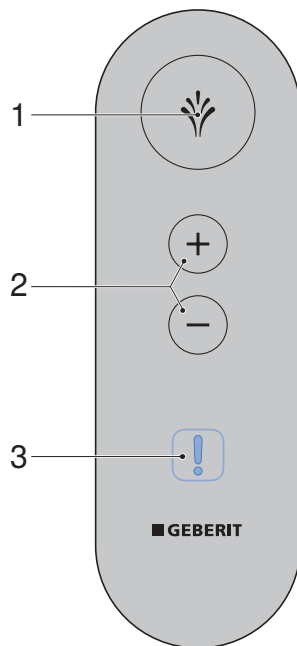

- 1 <Shower> button: start and stop the spray functionality.
- 2 <+>/<-> buttons: increase or decrease the spray intensity.
<+> and <-> buttons: start and stop the oscillating motion during the anal shower.
- 3 Status LED (only visible if required)

 Rear side of the remote control

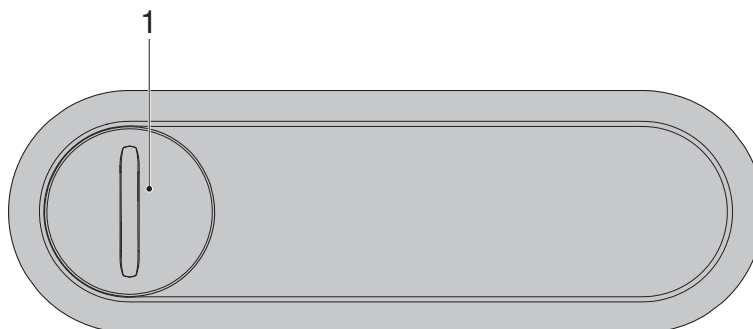

- 1 Battery compartment

Downloading the Geberit Home app

Download the Geberit Home app free of charge from the respective App-Store:

- 1 Open the App-Store on your smartphone.
- 2 Enter 'Geberit Home' in the search field.
 - ✓ The Geberit Home app is displayed.



- 3 Download the app.
 - ✓ The app is downloaded and displayed on your smartphone.

Alternatively, you can scan the respective QR code to download the Geberit Home app:

[Android:](#)



[iOS:](#)



How to use the device

Using the anal shower



See user manual.



 
<https://doc.geberit.com/971.794.00.0>

Prerequisite

- You are sitting down on the WC seat ring.



Briefly press the <Shower> button on the remote control.

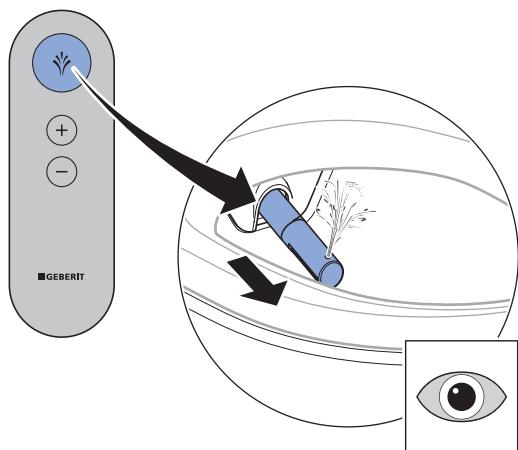

Result

- ✓ The shower procedure starts with the oscillating motion.



You can stop the shower procedure early by pressing the <Shower> button once again.

 
 
Setting the spray intensity

Prerequisite

- The shower procedure is running.



Press the <+> button to increase the spray intensity. Press the <-> button to decrease the spray intensity.

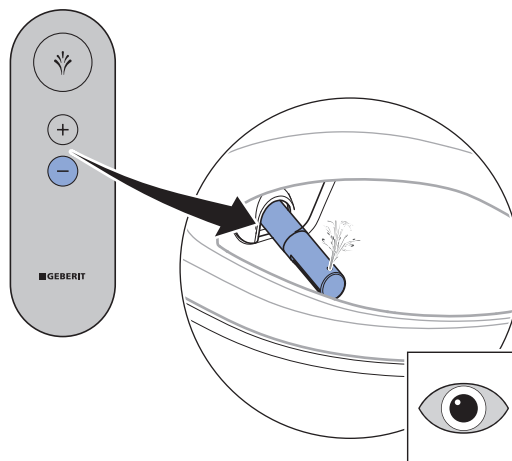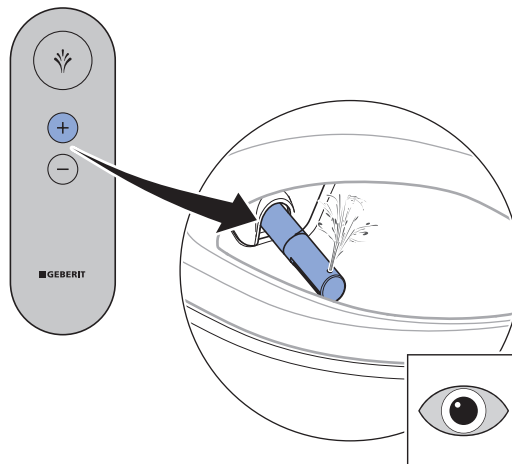

Result

- ✓ The shower spray becomes stronger/weaker.



You can set the spray intensity in 5 stages.

Setting the spray arm position

- i** Female users should set the spray arm position of the spray functionality to their ergonomic conditions so that it does not compromise the natural protection of the vaginal area.

Prerequisite

- The shower procedure is running.

- ▶ Use the Geberit Home app to position the spray arm.

Result

 
- ✓ The spray arm is optimally positioned.

- i** You can set the spray arm position in 5 stages.

Switching the oscillating motion of the anal shower on and off

- i** The oscillating motion of the spray arm increases the cleaning effect.

- ▶ The oscillating motion can be switched on and off by pressing the <+> and <-> buttons at the same time.

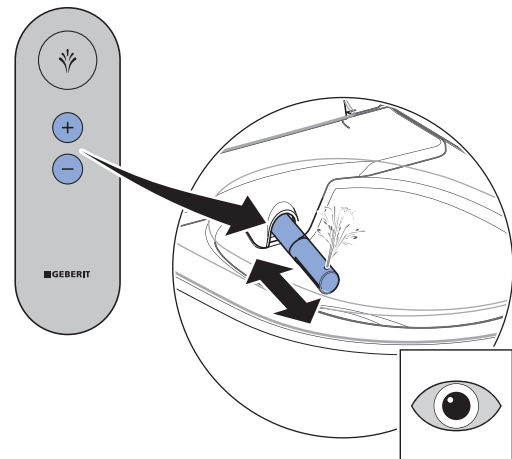

How to clean the device

Suitable cleaning agents and cleaning equipment

ATTENTION

Aggressive descaling agents

Unsuitable descaling agents may cause damage to the device.

- ▶ Only use Geberit AquaClean descaling agents to descale the device.
- ▶ Refer to the “Descaling the device” section.

ATTENTION

Aggressive and scouring cleaning agents

Cleaning using aggressive and scouring cleaning agents can cause surface damage.

- ▶ Use Geberit AquaClean cleaning agents.
- ▶ Pay attention to the cleaning and care instructions.

Using the Geberit AquaClean cleaning set is recommended, as this set includes a ready-made cleaning agent that is ideal for cleaning all Geberit AquaClean surfaces.

Recommended properties of suitable cleaning agents and cleaning equipment for best cleaning results:

Symbol	Properties of suitable cleaning agents
	Skin-friendly
	Cleaning agents are permitted to have a low acid content, e.g. diluted citric acid
	Low-foaming
	Liquid
	Water-dilutable

Symbol	Suitable cleaning equipment
	Soft, fine-pored sponges
	Lint-free, soft cloths which are free of dust
	Toilet brush



Geberit International AG
Schachenstrasse 77, CH-8645 Jona
documentation@geberit.com
www.geberit.com