
GEBERIT

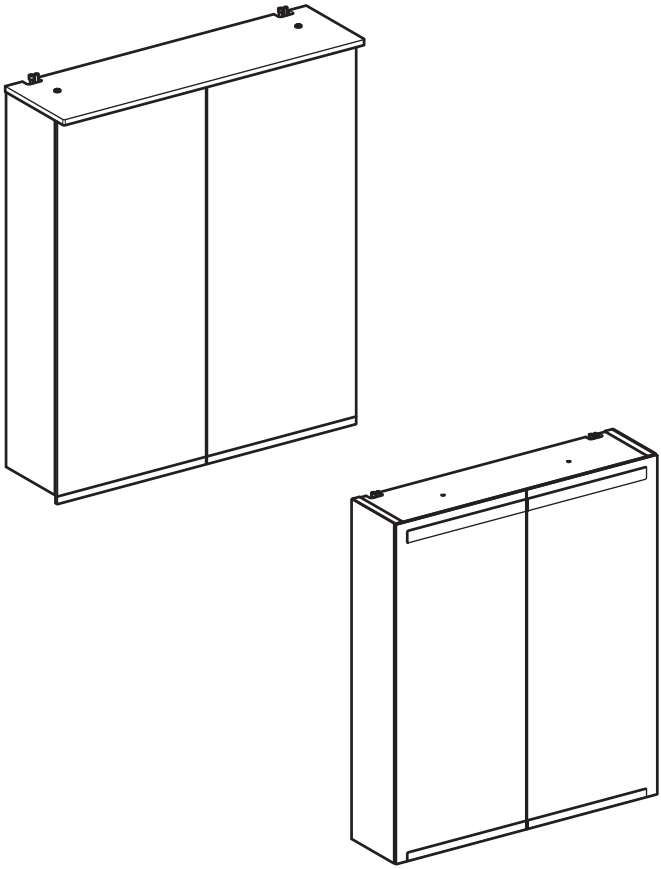

USER MANUAL

969.233.00.0(03)

Table of contents

For your safety **4**

Who is this product suitable for? 4

How is this product used? 4

Misuse 4

Technical data and conformity **4**

Technical data 4

Declaration of conformity 4

Getting to know your product **5**

The product at a glance 5

Using the power socket 5

How to use the product **6**

Switching light strips on or off 6

Switching the orientation light on and off 6

Care Instructions **7**

General care instructions 7

Care instructions for bathroom furniture and glass surfaces 7

Note for power socket elements 7

Disposal **8**

Disposal of waste electrical and electronic equipment 8

For your safety

Who is this product suitable for?

The mirror cabinet is suitable for use by all age groups. Children must be shown how to handle and operate it the first time they use it.

How is this product used?

The product is suitable for the following application purposes:

- bathroom installation indoors within the predetermined protection degree
- storing cosmetic and hygiene items
- adapting lighting conditions in bathrooms

Misuse

Geberit accepts no liability for the consequences arising from misuse.

Technical data and conformity

Technical data

Nominal voltage	230 V AC
Mains frequency	50 Hz
Protection degree	IP44
Protection class	II
Light colour	4200 K
Plug type	BS 4573 shaver socket
Power socket mains voltage	230 V AC
Energy efficiency class light source	F

Declaration of conformity

You can obtain a copy of the declaration of conformity from your responsible Geberit sales company.

45036001605950347 © 04-2025
969.233.00.0(03)

Getting to know your product

The product at a glance

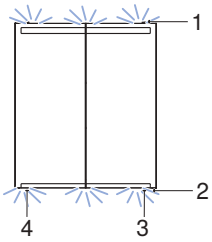


Figure 1: Geberit Option

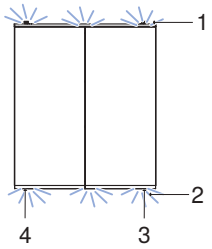


Figure 2: Geberit Option Plus

1	Top light strip
2	Bottom light strip
3	Touch sensor switch (switch top light strip on or off)
4	Touch sensor switch (switch bottom light strip on or off)

Depending on the mirror cabinet model, the touch sensor switches may be the opposite way round to those shown in the figure.

Using the power socket

The internal power socket is suitable for razors.

Only devices with a mains voltage that is compatible with the mains voltage of the power socket may be used. The mains connection must be compatible with the mains plug. → See "Technical data", page 4.


How to use the product

Switching light strips on or off

Prerequisite


– The mirror cabinet is equipped with a bottom and/or top light strip.

1 Press the touch sensor switch on the right.

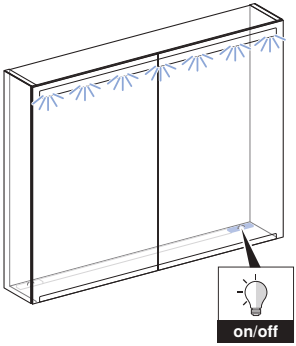

✓ The top light strip switches on or off.

2 Press the touch sensor switch on the left.

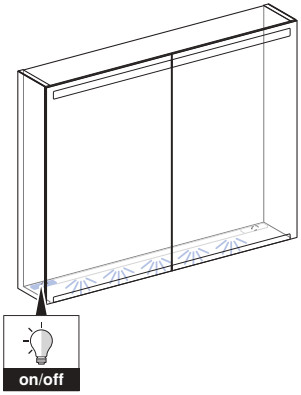


✓ The bottom light strip switches on or off.

Switching the orientation light on and off

Prerequisite

– The touch sensor switch on the light strip has an orientation light.

► When the light strip is switched off, press the touch sensor switch for at least 5 seconds.

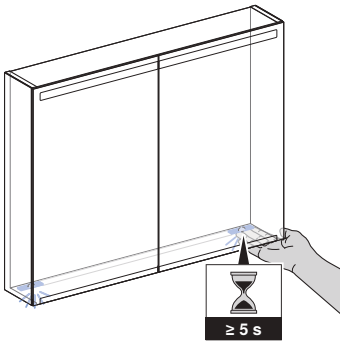

✓ The orientation light switches on or off.

45036001605950347 © 04-2025
969.233.00.0(03)

Care Instructions

Observe the following when cleaning and protecting bathroom furniture and glass surfaces.

The manufacturer does not assume any liability for product damage that arises as a result of incorrect care and handling.

General care instructions

- Never use cleaning agents that contain chlorine or acid or that are corrosive.
- Never use cleaning agents that are abrasive or may scratch the surface.
- Never use sharp or pointed objects when cleaning.
- Make sure that an efficient source of ventilation and an appropriate room temperature are present in your bathroom.
- Protect the surface from bleaching due to extreme light and sun exposure.

Care instructions for bathroom furniture and glass surfaces

- Use mild liquid cleaning agents and water.
- Use a soft, lint-free cloth.
- Avoid exposure to water to prevent swelling of the material and remove water from the surface immediately.
- Remove any substances containing solvents immediately.

Note for power socket elements

WARNING

Danger of death from electric shock

Incorrect cleaning of power socket elements can lead to death or serious injuries.

► Disconnect the power supply before carrying out cleaning.
► Make sure that all surfaces have dried completely before reconnecting the power supply.

Disposal

Disposal of waste electrical and electronic equipment



The symbol of the crossed-out wheeled bin means that waste electrical and electronic equipment (WEEE) must be disposed of separately and not with other non-recyclable waste. End users are legally obliged to return old equipment to public waste disposal authorities, distributors, or Geberit for proper disposal. Many distributors of electrical and electronic equipment are obliged to take back WEEE free of charge. Contact the responsible sales or service company to return the WEEE to Geberit.

Used batteries and accumulators that are not enclosed within the old equipment, as well as lamps that can be removed from the old equipment in a non-destructive manner, must be separated from the old equipment before being handed over to a disposal point.

If personal data is stored on the old equipment, end users themselves are responsible for deleting it before handing it over to a disposal point.

45036001605950347 © 04-2025
969.233.00.0(03)

45036001605950347 © 04-2025
969.233.00.0(03)

Geberit International AG
Schachenstrasse 77, CH-8645 Jona
documentation@geberit.com
www.geberit.com

45036001605950347 © 04-2025
969.233.00.0(03)